


NAV Client

Navigator Client 2.0

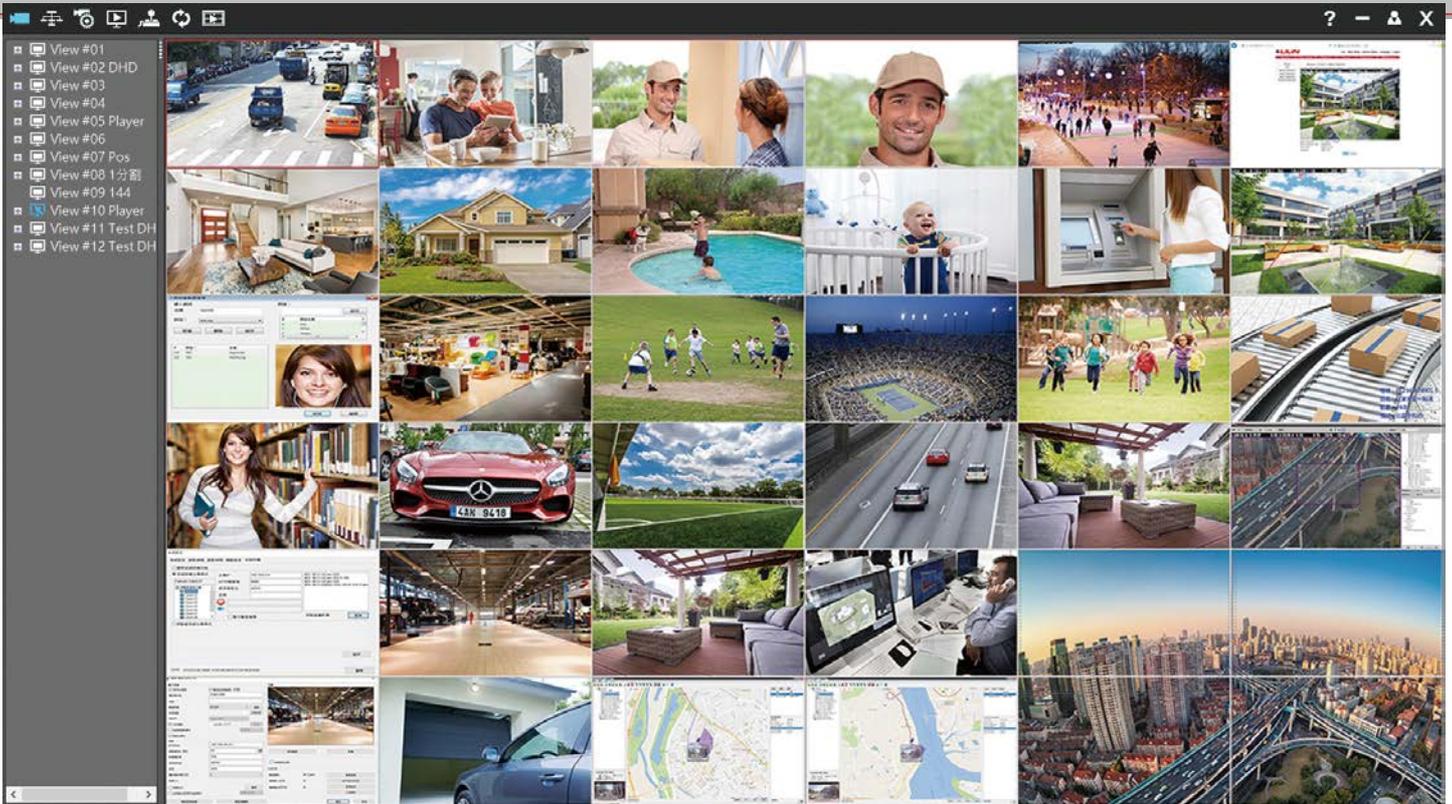

Navigator Client is a Windows based application for managing cameras of LILIN Navigator Enterprise servers, NVRs, and DVRs. Major features such as remote live monitoring, remote video playback, remote video backup, remove device status report, PTZ control, and user authentication are supported in **Navigator Client**.

Navigator Control Center is the server management software to manage Navigator Corporate servers, NVRs/DVRs, and IP cameras with Navigator Corporate servers. The differences of **Navigator Corporate** and **Enterprise** are: **Navigator Enterprise** is operated as a standalone recording device, whereas **Navigator Corporate** can communicate with user database, event information, and device database among Navigator Corporate servers. **Navigator Control Center** is capable of managing Navigator Corporate servers.

Features

- Views multiple NAV servers
- Centralized view groups management up to 36 channels per group
- Pre-configured video groups for user login
- Remote multiple-channels playback and backup
- Remote device management in Navigator servers

Navigator Client	
Viewer	
PTZ Control	Supported
OS	64-bit
Audio	1-way
Split Screen	1 ~ 144 · User-defined
Playback Screen	36
Remote live/playback	Live streaming, playback, packup, AVI file transcoding.
NAV control center	Supported
Async playback for the same cameras	Supported

Management	
Sync server playback	Supported
Centralized device management	Supported

Product Features

OS 64-bits

Navigator Client is a 64-bit Windows program that supports up to 20,000 cameras and 300 group views. Each group views can display maximum 144 channels. The software is an ideal solution for managing large scale installations across the Internet.



Function Key of Navigator Client

Press **F1** to expand to full screen. Press **F1** again to return to the normal mode.



Live Monitoring

To switch between camera views, click the view item to change to another camera view. To maximize the specific camera screen, click the full screen control.



PTZ Control

Features like presets recall, PTZ controls, auto focus, and zoom levels can be performed through the network.



Remote Device Download and Backup Chapter

You can perform remote playback in live views. To perform remote video backup, click **Backup** and select channels. Specify date, time, and destination directory and finally choose **Start Backup** or **Covert AVI** for multiple-channels video backup.



Synchronous Playback

Recordings of cameras from different NVR, AHD DVR, and Navigator can be played. Click the date and drag the timebar for video playback. For FF or FR, click the speed bar.



Audio Monitoring

If a device supports audio monitoring, select the channel and the speaker icon, and you will be able to listen to the audio. To change the volume of the channel, click the volume control.




Configure Live View Group

Click **Configure** and drag from the left device tree to view a group. Check the check box to support drag-n-drop for multiple devices.



Device Status Report

Check the devices on the local device tree to query the status report. Click **Reload** to refresh the report.

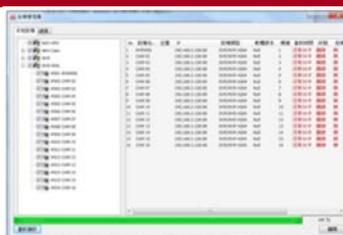

Asynchronous Playback

For asynchronous playback in a camera, select the camera from left device tree and drag the camera to the playback view group. Click **Camera Control** to perform the playback feature. Click **Single Playback** and select date and time, then drag the timebar to playback the video of the camera at different time periods.

